


Button to select CH 16 to call Coastguard BUT consider using mobile phone rather than VHF. CH 16 also used for hailing other craft.

Up and down buttons change Channel. Ensure 'M' is selected to communicate with hand helds on 37A

Rotate to turn on and adjust volume

Rotate to adjust from left to right until background noise is removed

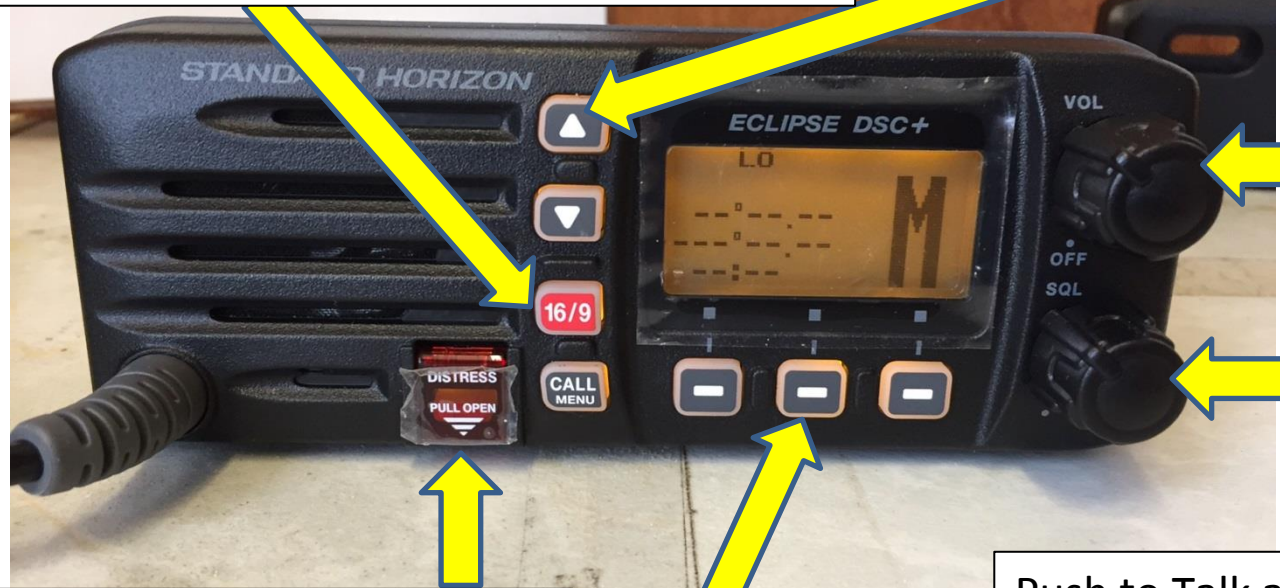

DSC button – **DO NOT USE**

Push to Talk and release to listen

When 1st turned on the unit will advise DSC not enabled and awaits for you to select 'OK' with this button

Channel selection buttons

Select 'LO' for normal use. Select 'HI' when needing to transmit over greater distances



Push to Talk and release to listen

Channel selection buttons

Select 'LO' for normal use. Select 'HI' when needing to transmit over greater distances