

VHF Base Station Instructions

Ensure Power switch on wall marked Horn / Radio is off.

Connect aerial and power leads.

Place on wooden support and the bungee cord stops it coming off.

Turn on power at wall switch.

Turn Radio on using volume switch.

Unit advises that DSC is not available and middle button needs to select OK.

Channel 'M' should be selected, if not, use up and down Channel selection buttons until it is. Channel 'M' will communicate with 37A on Hand Held units.

Adjust Squelch if required.

Use unit in 'LO' mode for normal use and 'HI' mode when needing to broadcast over longer distance.

If you need to contact the Coastguard, then use your mobile phone rather than via the VHF on Channel 16.

This is because the Coastguard will require you to remain on CH16 meaning that you can no longer communicate with your Safety Team on Channel M / 37A.